



When storing the poly unit for long periods of time, especially winter storage, the following steps must be followed to prevent rust, corrosion and fatigue of the equipment.

- 1. Make certain the inside of the tank is completely drained of chemical residue.
- 2. Thoroughly flush the inside of the tank with clean water.
- 3. Pump clean water through all areas of the plumbing including the mix tank, pumps, metering valve, and calibration valve.
- 4. Open all drain points and valves, and let as much of the liquid drain as possible.
- 5. If the unit will be exposed to possible freezing temperatures, the final flush of the system should be made with an anti-freeze liquid.
- 6. If the unit is supplied with a peristaltic pump, release the pump head and remove tubing to prevent any unnecessary wear.
- 7. Storing the machine inside a building is best to keep it from being exposed to the weather.
- 8. Disconnect power to the machine.

